


ENG

GOSSSEN

Condensed Instructions

15100 • 1/05.01

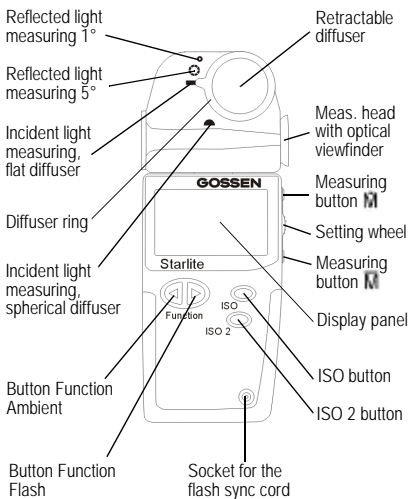

Use DIP Switches in the battery compartment for setting and selecting function groups and measuring capabilities.







Setting the film speeds

- Press and hold the ISO or ISO 2 button
- Set the desired ISO value using the setting wheel, e.g. 200
- The corresponding values for ISO 2 are automatically calculated and displayed based on the measuring results for ISO





Measuring modes

- Select incident light or reflected light at the diffusor ring

Ambient light

- Press the left Function button  to select ambient light 
- Press and hold the left Function button  and use setting wheel to select the desired Function , EV or 
- Release Function button
- Set the desired f/stop or exposure time with the setting wheel alone
- Press the button 



Flash light

- Press the right Function button  to select flash light 
- Preselect the desired measuring time (sync speed) with the setting wheel
- Press the button 
Cord: the flash is being automatically triggered when pressing 
Noncord: for 45 s the meter is ready for manual triggering of the flash

Contrast measurements

- Keep  depressed and scan subject





Averaging



- Take first measurement with button 
- Take further measurements with 

CINE / PHOTOMETRY



- Set DIP switch 1 in battery compartment to CINE

CINE






- Press the left Function button  to select ambient light 
- Press and hold the left Function button  and use the setting wheel to select measuring unit 
- Release Function button

- Set the desired  number with the setting wheel alone
- Press the button 

CINE – Setting shutter angles other than 180°

- Simultaneously press both Function buttons  and 
- Use setting wheel to set the desired angle

Photometry

- Select with the corresponding Function button  ambient light  or  flash 
- Set the diffuser ring at the meter head to the desired measuring function
- Use setting Function button and setting wheel to select the corresponding measuring function
- Press the button 

Please refer to the enclosed comprehensive instruction manual for detailed instructions.

GOSSSEN Foto- und Lichtmeßtechnik GmbH
 Lina-Ammon-Str. 22
 D-90471 Nürnberg
 Fon: +49 911 / 8602-181
 Fax: +49 911 / 8602-142
<http://www.gossen-photo.de>

GOSSSEN